

Formula for calculating panel widths:
 BI-PARTING
 Gross opening width + 87 =
 Then divide by the number of panels required.
 The maximum panel width is 800mm.
 SINGLE WING
 Gross opening width - 1.5 =
 Then divide by the number of panels required.
 The maximum panel width is 800mm.

